


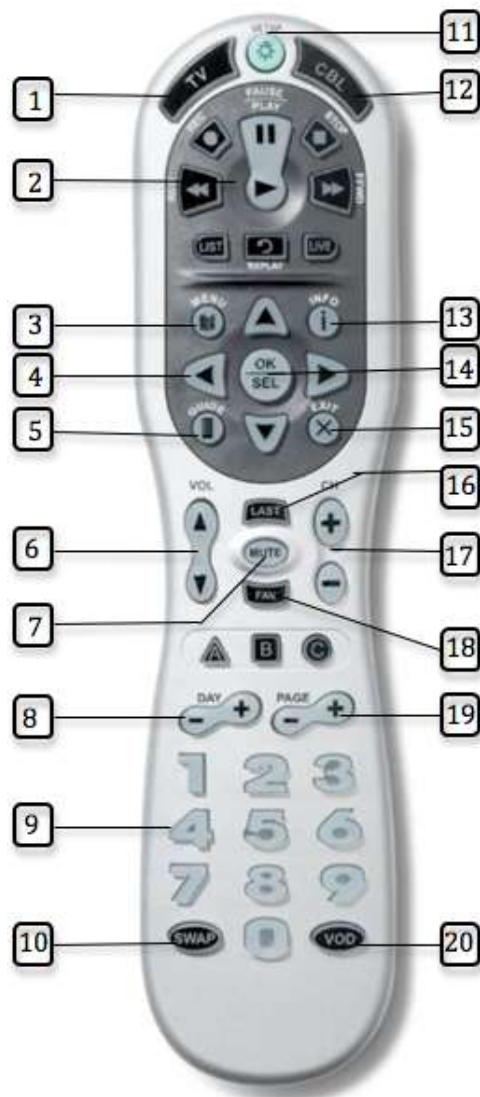

No.	Button	Use
1	TV (Power)	Press TV once to turn on or off the TV
2	REW, Play, FF, Rec, Stop, Pause	In the PVR mode use these keys to control the unit. The <b>R</b> is record
3	MENU	Press MENU once to display your cables screen menu.
4	CURSOR keys	Use CURSOR keys to move the cursor in the program guide and menu screens.
5	GUIDE	Use GUIDE to display the program guide.
6	VOL + and VOL -	Use VOL + or - to raise or lower the sound volume.
7	MUTE	Press MUTE once to turn sound off or on.
8	DAY	Not used at this time
9	KEYPAD	Use the KEYPAD (0-9) to directly select channels.
10	SWAP	Not used at this time
11	SETUP	Use RCU SEPUP for all programming sequences
12	CABLE	Not used at this time
13	INFO	Use INFO to display current channel and program information.
14	OK	Use OK to choose options, PPV events, and to tune programs
15	EXIT	Use EXIT to exit out of your cable converter's menu & guide.
16	LAST	Press LAST once to recall the last channel watched.
17	CH+ and CH-	Use CH+ or - to select the next higher or lower channel.
18	FAVORITES	Not used at this time
19	PAGE + and PG -	Use PAGE + & - to page up or down on menu screen & program guide.
20	VOD	Programmable button



## TROUBLESHOOTING

### If Remote or Set Top Box is not Working

Check and make sure the batteries in the remote control are not weak or dead.  
 Make sure the Set Top Box is plugged in, and there is a clear path between the remote and the Set Top Box.  
 Make sure all components and cables are properly connected and plugged in.  
 Make sure TV is on the proper input (cable = channel 3, or a video input if using yellow/red/white cables).

For more information on this remote and for device codes please visit:  
[www.urcsupport.com](http://www.urcsupport.com)