


No. Button	Use
1 Power	Press POWER once to turn on or off the selected home entertainment component
2 RCU SETUP	Use RCU SETUP for all programming sequences
3 REW, Play, FF, Rec, Stop, Pause	In the DVD/VCR & PVR modes use these keys to control the unit. The (R) is record
4 MENU	Press MENU once to display your cables screen menu.
5 CURSOR keys	Use CURSOR keys to move the cursor in the program guide and menu screens.
6 GUIDE	Use GUIDE to display the program guide.
7 PAGE + and PG -	Use PAGE + & - to page up or down on menu screen & program guide.
8 VOL + and VOL -	Use VOL + or - to raise or lower the sound volume.
9 MUTE	Press MUTE once to turn sound off or on.
10 KEYPAD	Use the KEYPAD (0-9) to directly select channels.
11 INPUT	In TV mode press INPUT to control the input source for the TV.
12 TV, AUD, DVD, AUX, and STB	Press these keys once to select a home entertainment component to control.
13 INFO	Use INFO to display current channel and program information.
14 OK	Use OK to choose options, PPV events, and to tune programs from the program guide.
15 EXIT	Use EXIT to exit out of your cable converter's menu & guide.
16 CH+ and CH-	Use CH+ or - to select the next higher or lower channel.
17 LAST	Press LAST once to recall the last channel watched.
18 CC	Use CC (closed captioning) to turn on or off the captioning.

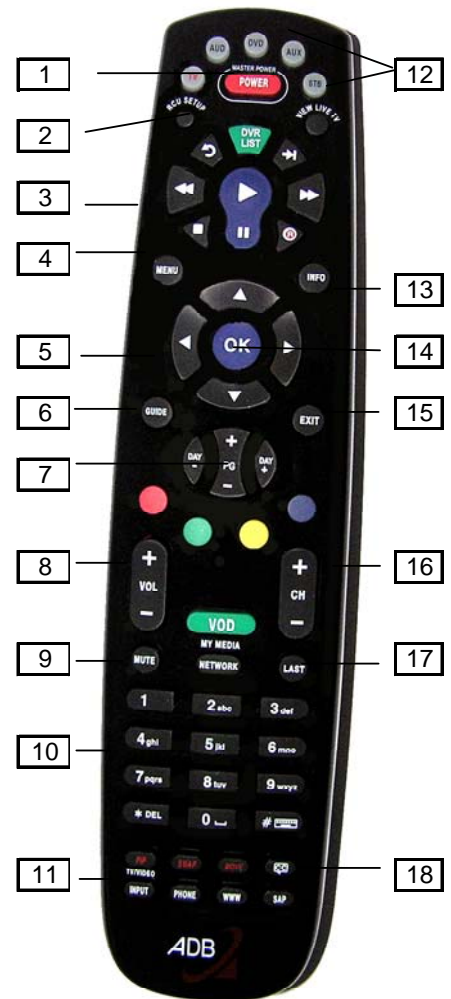

TROUBLESHOOTING

If your Remote is not Working

Check and make sure the batteries in the remote control are not weak or dead.
 Make sure the Set Top Box is plugged in, and there is a clear path between the remote and the Set Top Box.
 Make sure you press the STB button then press the POWER button. (this will turn on the set top box)

If you are Having Problems with your TV

Make sure all components and cables are properly connected and plugged in.
 Press the TV button, then press the POWER button on your remote. (tv should turn on)
 Make sure your TV is on the proper input (cable = channel 3, or a video input if using yellow/red/white cables)

IF your Set Top Box does not work

Press the STB button on the remote, then Press the POWER button. (the box should turn on)
 In order to activate the box functions - change channel, menu, etc, press STB button then the feature you want.